SEE
SOLIGOR
MOVIE LENSES
AT BETTER DEALERS
EVERYWHERE!

SOLIGOR 135MM F:4.5 TELEPHOTO

FOR
ARGUS C-3
CAMERAS

IMPORTED BY

ALLIED-IMPE

CORPORATION

NEWYORK 11. N. Y.



BUILT TO SOLIGOR STANDARDS

Easy to Install...

To Set Engraved Scale for Viewing From Top of Camera

- 1. Release set screws on geared coupling ring.
- Unscrew ring from lens by turning counter-clockwise (with rear of lens facing you).
- 3. Screw lens into camera firmly.
- Loosen 3 set screws on lens mount, and lens will freely rotate into desired position.
- 5. Tighten 3 set screws firmly.
- 6. Unscrew lens from camera.
- Replace geared coupling ring and tighten its set screws.

A Triumph in Optical Engineering!

- HIGHEST OPTICAL QUALITY
- EDGE-TO-EDGE SHAR PNESS
- HARD COATED GLASS / AIR SURFACES
- HIGHLY COLOR CORRECTED
- . DEPTH OF FIELD SCALE
- FOCUSES 8 FT. TO INFINITY (∞)
- . SUPPLIED WITH FILTER-HOLDING LENS HOOD

AND CLIP-ON MASK FOR YOUR VIEWFINDER

To Couple With R.F...

- 1. Mount lens on camera.
- 2. Set lens and camera R. F. dial at (∞) infinity.
- Replace center coupling gear on camero and lock into place with cover screw.
- For focusing, rotate lens, not R.F. dial, but view through R.F. window for proper focus.

IF BACK FOCUS ADJUSTMENT IS NEEDED Remove the geared ring that couples the range-finder and you will see a black ring held by red screws. Mount your Soligor Telephoto Lens to the camera and loosen these red screws. Open the camera back and insert a piece of ground glass in the film channel. Set the shutter on Bulb. Set the lens at infinity and focus through the ground glass at a subject at infinity until that subject is sharp—then tighten the red screws.

INSTRUCTIONS

ELITAR-SOLIGOR 135mm f:4.5 LENS for ARGUS C2, C3



- 1- Set footage distance of camera at infinity
- 2- Remove screw covering center camera gear (between rangefinder and lens) by turning counter-clockwise.
- 3- Remove normal ARGUS lens by turning counter-clockwise.
- 4- Holding front of ELITAR-SOLIGOR lens facing you, turn (1) counter-clockwise until it stops. Push (2) toward (1) so that (2) may be freely turned.
- 5- Set lens at infinity, and screw in until it stops.
- 6- Replace center camera gear (with camera rangefirder set at infinity) and turn the first thread of the coupling gear on the lens to mesh with gear of camera.
- 7- Turn locking ring (1) clockwise to lock into permanent position.

IMPORTED & GUARANTEED BY:

CORPORATION ALLIED - IMPEX

New York 10, N.Y. 28 West 22nd Street

NOTES: To remove lens from camera:

- a- Hold camera firmly in one hand.
 b- Grip lens firmly, both chrome and Ring (1) with other hand.
- c- Now proceed to unscrew lens counter clockwise.